



TRIAx

Flow

# DRM system

## Installation and Setting guide

Index	page
1. INTRODUCTION .....	3
2. IKUSI FLOW DRM SYSTEM DESCRIPTION .....	3
3. INITIAL CONFIGURATION.....	4
3.1. Enable Advanced Configuration .....	4
4. DRM SYSTEMS .....	4
4.1. Samsung LYNK DRM .....	4
4.1.1.Enable Samsung LYNK DRM.....	4
4.2. Philips VSecure.....	5
4.2.1.Enable Philips VSecure .....	5
4.2.2.Encryption key download.....	5
4.2.3.Encryption key regeneration.....	6
4.3 LG Pro:Idiom .....	6
4.3.1 Enable LG Pro:Idiom.....	6
4.3.2 Pro:Idiom key renewal	
5. DRM STATUS CHECKING .....	8

## 1. INTRODUCTION

Ikusi Flow headend allows to encrypt contents in order to be securely transmitted in coaxial or IPTV distribution networks. In this guide the Ikusi Flow hospitality content protection (Hospitality DRMs) architecture is described. Also, which are the DRMs embedded in the headend and how are they used is detailed.

Ikusi Flow incorporates the main Hospitality DRM systems: Samsung LYNK DRM, Philips VSecure and LG Pro:Idiom. These systems have been specifically designed to protect contents delivered in hospitality premises (hotels, hospitals, residences for elderly people,...) and they have been approved by the principal content producers.

The integration of those systems into Ikusi Flow have been done such that avoiding the need for an external DRM server and for additional signal encryption devices. Both functions are included in Ikusi Flow headend, improving the simplicity of the system and therefore, reducing its total cost.

## 2. IKUSI FLOW DRM SYSTEM DESCRIPTION


The DRM systems embedded in Ikusi Flow consist basically on two subsystems:

- **DRM server.** It is the server in charge of managing the encryption signalling. It resides in the FLOW HUB module. In the cases of Samsung LYNK DRM and LG Pro:Idiom, the server only works if you have installed a LYNK DRM or a LG Pro:Idiom license. If you don't have one, please contact with Ikusi Multimedia Support Department in order to obtain it.
- **Encryption hardware.** They are the devices in charge of signal encryption in strict sense. This hardware is embedded in the FLOW SEC and FLOW ENC modules. Therefore, only the contents that are managed by a FLOW SEC module can be encrypted (for example, pay TV channels) or by a FLOW ENC module (for example, contents coming from a STB). In the case of LG Pro:Idiom, each encryption module (FLOW SEC and FLOW ENC) must have a LG Pro:Idiom license active. If you don't have one, please contact with Ikusi Multimedia Support Department in order to obtain it.


The headend, after DRM enabling, will encrypt all the contents that are managed by the FLOW SEC and FLOW ENC modules. Moreover, it will signalize the encryption, both in the RF output and in the IP output, using the specific mechanism of each DRM system.

In this way, the content is securely transmitted within the TV distribution network. The television itself is responsible for decrypting the signal. To do so, two options are available:

- The television can either include an in-built DRM, i.e., the built-in Samsung LYNK DRM TVs, Philips VSecure TVs or LG Pro:Idiom TVs.

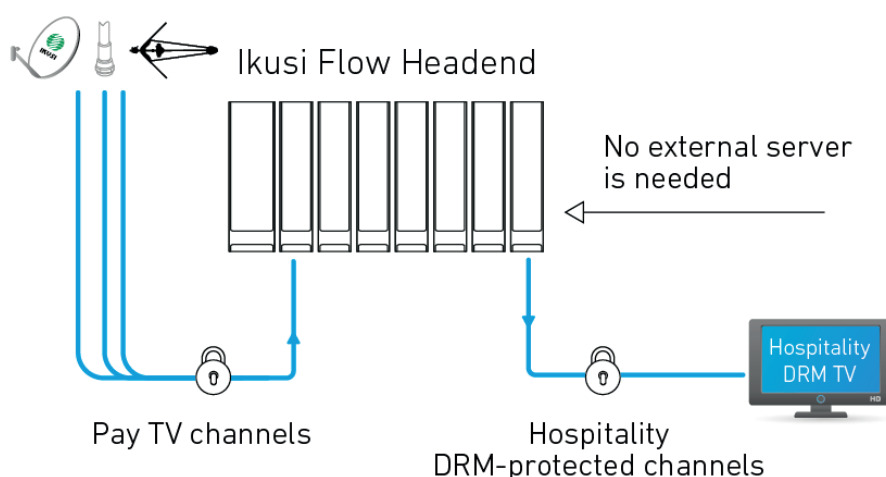

- Or the DRM can be included in the television through a DRM end-point. In the specific case of VSecure, Ikusi offers the option of a VSecure CAM, which is compatible with any CI or CI+ television. This is a simple, cost-effective solution, with no need to use a smart card (card less solution).

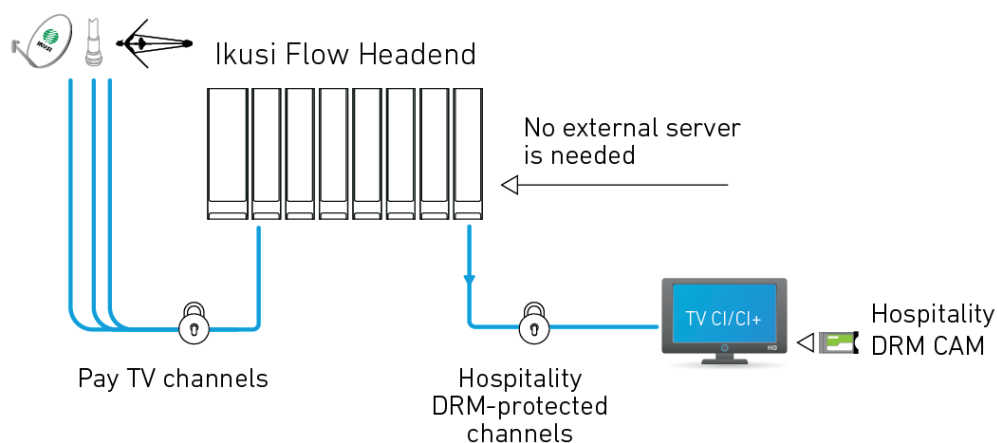

In any case, management is extremely simple, avoiding the problems associated with the use of a traditional broadcast CAS.

### 3. INITIAL CONFIGURATION

#### 3.1 Enable Advanced Configuration

The management of the DRM server is performed using options of the advanced configuration. Therefore, the first step consists in enabling advanced configuration.

- Go to MENU→ADVANCED CONFIGURATION→Enable advanced configuration

### 4. DRM SYSTEMS


Ikusi Flow incorporates the three main Hospitality DRM systems: Samsung LYNK DRM, Philips VSecure and LG Pro:Idiom. As a result, in the case of using last generation Samsung, Philips or LG TVs, there is not need for additional hardware in the viewing devices, because the TVs itself will be in charge of decrypting the signal.

Details of how Ikusi Flow setup with these systems is performed can be found below.


#### 4.1 Samsung LYNK DRM

##### 4.1.1 Enable Samsung LYNK DRM

To enable Samsung LYNK DRM, go to MENU→ADVANCED CONFIGURATION→DRM Configuration.

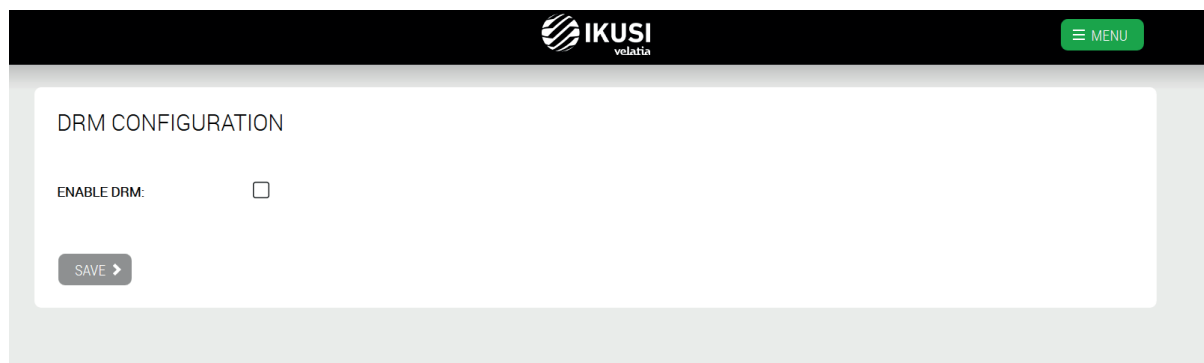

Check ENABLE DRM box. After that, open SELEC DRM list and choose Samsung LYNK. Finally, push SAVE button.

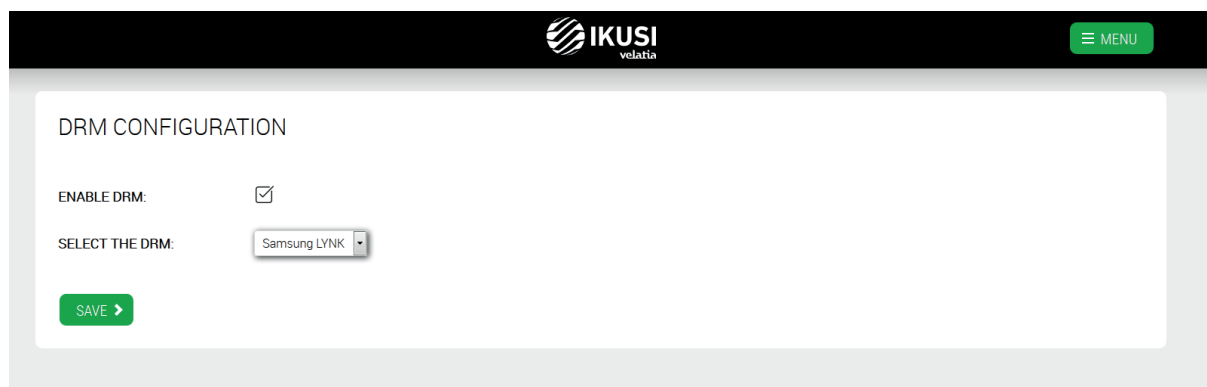

IKUSI velatia

MENU

DRM CONFIGURATION

ENABLE DRM: ☒

SELECT THE DRM: Samsung LYNK

SAVE >


After that, Ikusi Flow will start to encrypt all the contents that are managed by FLOW SEC and FLOW ENC modules.

NOTE: the LYNK DRM server only works if you have installed a LYM DRM license. If you don't have one, the signal will be encrypted but the needed signalling to decryption in the TV will not be included, and the result will be a black picture in the TV. Please contact with Ikusi Multimedia Support Department in order to obtain the corresponding license.

## 4.2 Philips VSecure

### 4.2.1 Enable Philips VSecure

To enable Philips VSecure, go to MENU→ADVANCED CONFIGURATION→DRM Configuration.

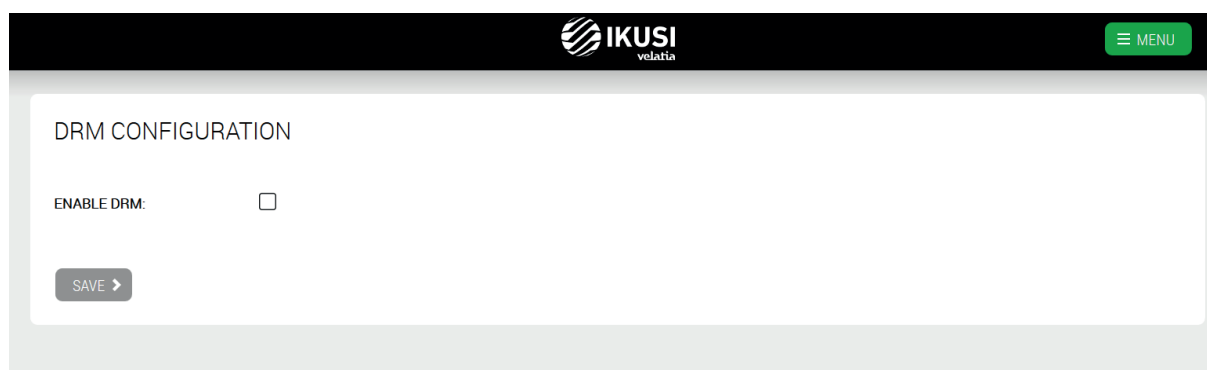

IKUSI velatia

MENU


DRM CONFIGURATION

ENABLE DRM: ☐

SELECT THE DRM:

SAVE >

Check ENABLE DRM box. After that, open SELEC DRM list and choose Philips VSecure. Finally, push SAVE button.

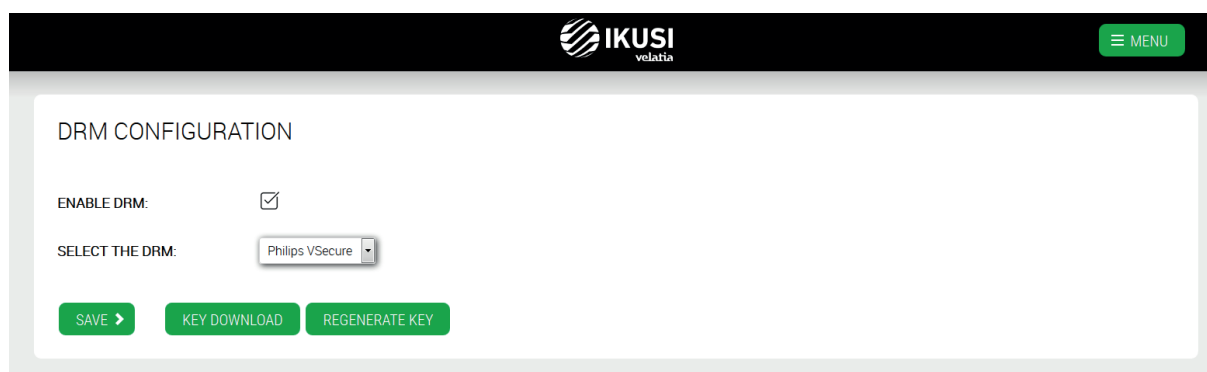

IKUSI velatia

MENU

DRM CONFIGURATION

ENABLE DRM: ☒

SELECT THE DRM: Philips VSecure

SAVE > KEY DOWNLOAD REGENERATE KEY

After that, Ikusi Flow will start to encrypt all the contents that are managed by FLOW SEC and FLOW ENC modules.

### 4.2.2 Encryption key download

The key that is used to encrypt the signal is stored in the headend. If you need to know it in order to generate TVs key, you can download it pushing KEY DOWNLOAD button.

A window will open, informing VSecPlain.txt is going to be downloaded. That file contains the encryption key.

### 4.2.3 Encryption key regeneration

When the system has been attacked and using a new encryption key is needed, push REGENERATE KEY button. A window will open asking for confirmation of the key regeneration. If you understand the implications of the key regeneration and you agree, push **YES**.



## KEYS FILE REGENERATION

If the keys file is re-generated, all TV-s will need to be reconfigured

YES

NO

**ATTENTION:** If you regenerate the key, you should reconfigure all the TVs in order to load the new key to them. Do not regenerate the key if you are not sure about how to perform this process (the TVs would show a black picture until they receive the new key).

## 4.3 LG Pro:Idiom


### 4.3.1 Enable LG Pro:Idiom


To enable LG Pro:Idiom, go to MENU→ADVANCED CONFIGURATIONS→DRM configuration.

Check ENABLE DRM box. After that, open SELECT DRM list and choose LG Pro:Idiom. Finally, press the SAVE button.

In order to encrypt using the DRM, LG Pro:Idiom needs to register the Pro:Idiom licenses of the FLOW HUB module and of the FLOW SEC and FLOW ENC modules. If these are not available, please contact with Ikusi Multimedia Support Department to obtain them.

Insert the Pro:Idiom license number of the HUB module in the HUB LICENSE field and press the OK button.





## DRM CONFIGURATION

ENABLE DRM:

☒

SELECT THE DRM:

LG Pro:Idiom

HUB LICENSE:

LN63-TSCJ-KQIE-40HW-SZXB-2PXZ-S4


OK

MODULE LICENSE:

OK

SERIAL NUMBER	LICENSE
<div><div>SAVE &gt;</div><div>REQUEST PRO:IDIOM KEY RENEWAL</div></div>	

After this, insert the Pro:Idiom licenses for the SEC and ENC modules one by one, in the MODULE LICENSE field. Press the OK button after introducing each of the licenses. A list will appear with the serial numbers of the modules and Pro:Idiom licence associated to each of them.



MENU

## DRM CONFIGURATION

ENABLE DRM:

☒

SELECT THE DRM:

LG ProIdiom

HUB LICENSE:

LN63-TSCJ-KQIE-40HW-SZX8-2PXZ-S4

OK

MODULE LICENSE:

OK

SERIAL NUMBER	LICENSE
4311SB009293	NGZ7-JGKI-X4FS-7LB2-4YI2-CRTH-4I
4315SB017474	YPPI-ZFP6-DGTL-MHOF-U4J6-44P5-DM


SAVE >

REQUEST PRO:IDIOM KEY RENEWAL


After that, Ikusi Flow will start to encrypt all the contents that are being processed by the FLOW SEC and FLOW ENC modules.

4.3.2 Pro:Idiom key renewal

In certain circumstances, LG may request the key used by the DRM to be changed. If this is the case, the new key will be supplied to the Ikusi Flow headend through a software update. The new key may be sent to the televisions from the Ikusi Flow headend itself. To do this, press the REQUEST PRO:IDIOM KEY RENEWAL button.



MENU



OK!

• Pro:Idiom key renewal requested

DRM CONFIGURATION

ENABLE DRM:

☒

SELECT THE DRM:

LG Pro:Idiom

HUB LICENSE:

LN63-TSCJ-KQIE-4QHW-SZXB-2PXZ-S4

OK

MODULE LICENSE:

OK

SERIAL NUMBER	LICENSE
4311SB009293	NGZ7-JGKI-X4FS-7LB2-4YI2-CRTH-4I
4315SB017474	YPPI-ZFP6-DGTL-MHOF-U4J6-44P5-DM


SAVE




REQUEST PRO:IDIOM KEY RENEWAL

After a few moments, the key renewal process will begin and the televisions will acquire the new Pro:Idiom key.

5. DRM STATUS CHECKING

Once the DRM system has been enabled, you can check its status in Home screen. There are three methods to check the DRM has been enabled:

- In Home Screen, in service listing you can check that services processed by FLOW SEC and FLOW ENC modules are being protected with a DRM. They will be labelled with icon .

239.255.4.5	Disney Channel	Disney Channel	eng	spa	
239.255.4.3	24h	24h	qaa	spa	
239.255.4.6	PARAMOUNT CHANNEL	PARAMOUNT CHANNEL	qaa	spa	
239.255.4.7	GOL	GOL	nol	spa	
239.255.4.8	FOX LIFE HD	FOX LIFE HD	qaa	spa	
239.255.4.9	BEIN SPORTS	BEIN SPORTS	ndl	qaa	
239.255.4.10	COMEDYCENTRALHD	COMEDYCENTRALHD	qaa	spa	
239.255.4.11	KIKA	KIKA	ger	mis	
239.255.4.12	ZDF	ZDF	ger	mis	mul
239.255.4.13	3sat	3sat	ger	mis	mul
239.255.4.29	HOTEL PPV	HOTEL PPV	und		

- Clicking over a FLOW SEC or FLOW ENC module a status screen will open. Among the information shown in this window, you could see which DRM is being used (in the example, Philips VSecure).



## MODULE INFORMATION

SLOT NUMBER	5
SERIAL NUMBER	4311SB009316
HARDWARE VERSION	0
FIRMWARE VERSION	2.2.0+beta1.3.g5a74c60+d20170219
TEMPERATURE	42°C
DRM	Philips VSecure

### CAM 1



SEC

REBOOT

- In the installation overview report appears which DRM is being used in each FLOW SEC or FLOW ENC module. To obtain this report go to MENU→STATUS→ Overview. A window with the whole information of the headend in detail will open. In each box dedicated to each FLOW SEC or FLOW ENC module appears information about DRM (in the example, Samsung LYNK).

SEC	
Slot number	5
Serial number	4311SB009316
Hardware version	0
Firmware version	2.2.0+alpha10.83.g9629e95+d20170215
Temperature	40°C
Operating hours	256h
DRM	Samsung LYNK
CAM 1 Inserted	yes
CAM 1 In use	yes
CAM 1 Use level	60%
CAM 1 Manufacturer	SmarDTV
CAM 1 Model	Movistar+ Pro CAM
CAM 1 Services	FOX LIFE HD BEIN SPORTS COMEDYCENTRALHD
CAM 2 Inserted	no



TRIAx

Donostia Ibilbidea, 28 · 20115 Astigarraga · Gipuzkoa · Spain

Tel.: +34 943 44 89 44 · [tds@triax.com](mailto:tds@triax.com)

[triax.com](http://triax.com)